

# GHOST ADJUSTABLE MAIN JET INSTRUCTIONS

REVISED 10/03/2025  
PN: AMJ GHOST KIT

1. DRAIN FUEL FROM CARBURETOR AND REMOVE IT FROM THE ENGINE.
2. REMOVE FACTORY FLOAT BOWL. IT WILL NOT BE REUSED.
3. REMOVE MAIN JET FROM CARB AND DRILL JET WITH NUMBER 54 DRILL BIT SUPPLIED WITH AMJ KIT. (BLOW OUT JET TO MAKE SURE IT IS CLEAN BEFORE REINSTALLING)
4. INSTALL NEW FLOAT BOWL (MAKE SURE ORING IS SEATED PROPER IN GROOVE) LEAVE SCREWS LOOSE AT THIS TIME.
5. TURN IN AMJ NEEDLE UNTIL SPRING BOTTOMS OUT. THIS WILL CENTER AMJ NEEDLE INTO JET. CAREFULLY TIGHTEN BOWL SCREWS WHILE BACKING OUT AMJ NEEDLE. THIS WILL ALLOW THE FLOAT BOWL TO CENTER OVER THE MAIN JET CORRECTLY.
6. NOW TURN IN AMJ NEEDLE UNTIL IT LIGHTLY SEATS AND BACK OUT 2 TURNS. THIS IS A GOOD STARTING POINT.

TECH LINE (319) 462-6932 MONDAY 8 AM TO 5PM, TUESDAY AND WEDNESDAY 8 AM TO NOON CST.

\*\*\*\*\*PLEASE NOTE\*\*\*\*\*

**This product is intended for closed-course racing only and is sold “as-is” without warranty. Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.**

\*\*\*\*\*