



SPRING TESTER INSTRUCTIONS (REVISED 12/1/21)

THIS SPRING TESTER IS DESIGNED TO WORK IN A DRILL PRESS, ARBOR PRESS OR HYDRAULIC PRESS. IT CAN ALSO BE USED IN A VISE **CAREFULLY**.

PLACE THE SPRING IN THE CENTER OF THE TESTER, COMPRESS TO DESIRED HEIGHT AND READ THE GAUGE. NOTE: IT IS NOT UNCOMMON TO SEE A DIFFERENCE IN YOUR READING OF A FEW PERCENT COMPARED TO THE SPRING MANUFACTURERS LISTED PRESSURE. THIS IS DUE TO MANUFACTURING TOLERANCES.

TECH SUPPORT OR MAINTENANCE QUESTIONS FEEL FREE TO CALL 319-462-6932.

NEVER COMPRESS TESTER PAST ITS GAUGES MAX PRESSURE OR YOU WILL DAMAGE THE GAUGE, THIS IS NOT COVERED UNDER WARRANTY.

*****PLEASE NOTE*****

This product is intended for closed-course racing only and is sold “as-is” without warranty. Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.
