


# GX200 MOUNTING INSTRUCTIONS FOR POLARIS 120

## WIRING INSTALLATION:

CUT OFF THE WHITE END ON THE SLED BLACK WIRE AND INSTALL NEW WIRE BULLET PROVIDED.  
THE BLACK SLED WIRE WILL GO TO THE BLACK ENGINE WIRE.  
BROWN GROUND WIRE WILL BOLT TO THE ENGINE RECOIL SHROUD.  
TAPE OFF THE EXTRA BROWN SLED WIRE.  
THE YELLOW SLED WIRE WILL GO TO THE PINK ENGINE WIRE.

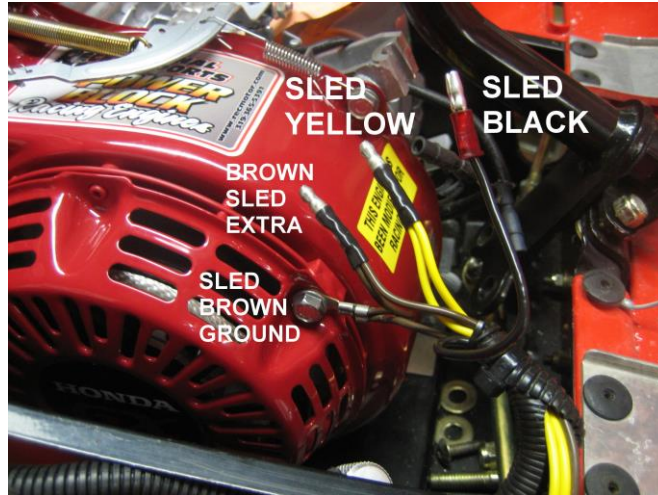

THIS IS THE THROTTLE HOOK UP.



TECH LINE (319) 462-6932 MONDAY 8 AM TO 5PM, TUESDAY AND WEDNESDAY 8 AM TO NOON CST.

\*\*\*\*\*PLEASE NOTE\*\*\*\*\*

**This product is intended for closed-course racing only and is sold “as-is” without warranty. Manufacturer and distributor specifically disclaim all responsibility for consequential and incidental damages or any other losses arising from the use of this product. Any dispute arising out of the use of this product must be settled in Linn County, Iowa under Iowa law.**

\*\*\*\*\*